

# kogan

 
M u" O ° ) °

M u" O ° ) °

M y u" O ° ) °

M y u" O ° ) ° .

## USER MANUAL

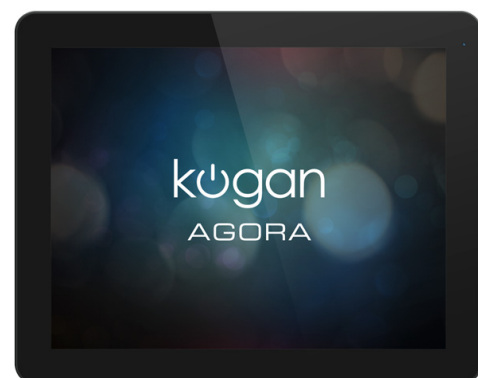



## Attention

This manual contains important security measures and instructions on the correct use of this product. In order to avoid harm to the device or yourself, please make sure to read this manual carefully before use.

- Do not use this device in moist, dusty or high temperature environments.
- Avoid high-impact situations when using the device. Do not drop or throw the device.
- At -to-date, this user manual is subject to change without notice.

All pictures used in this manual are for reference only. Images used may not be identical to your product however functionality and instructions will be accurate.
 
## 1. Appearance & Buttons

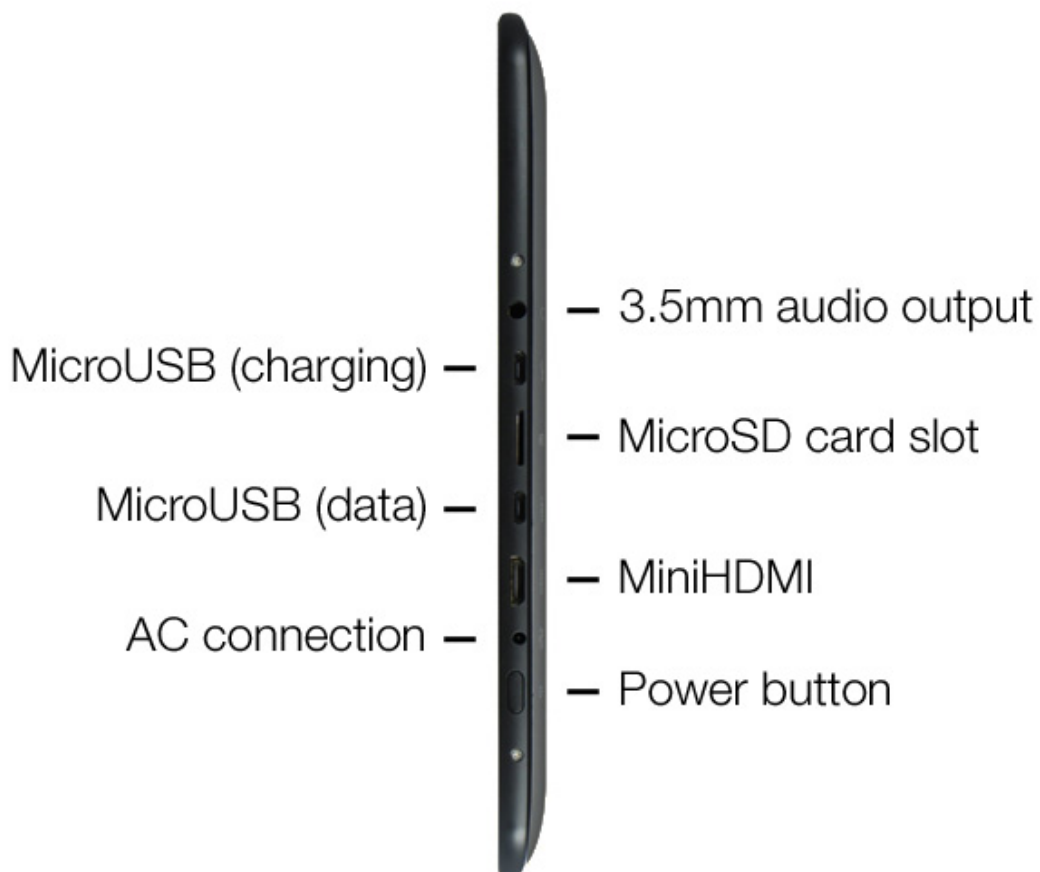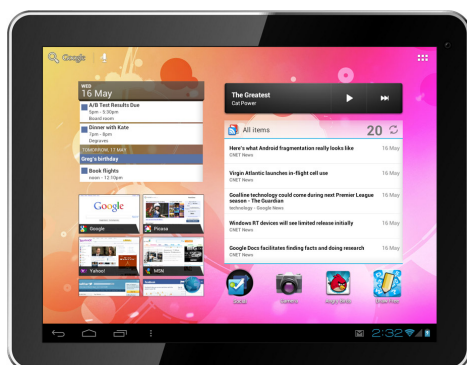

### 1.1 Touch Panel

The 9.7" capacitive touch panel enables clicking and dragging for using the tablet.

## 1.2 Power

### Startup

Long-press and hold the *Power* button and the tablet will power on. For first time use, startup may take up to a minute.

### Shutdown

Long-press the *Power* button to display the system menu. Tap on "Power Off" and confirm your selection, and the tablet will turn off.

*Note: When the tablet runs out of power, it will turn off automatically.*

## 1.3 Back Button

A short-press of the *Back* button will return you to the last screen.

A long-press of the *Back* button when at the Android home screen will show the Google Search field.

## 1.4 Menu

A short-press of the *Home* button will return your to the Android home screen.

## 1.5 Volume Up / Volume Down

The *Volume Up/Down* rocker button on the top outside edge of the tablet achieves volume changes. Depending on which app or screen you are using will determine which sound type is altered, e.g. Media, Notifications, etc.

## 1.6 3.5mm Stereo Output

This connection can be used to connect the tablet to a pair of headphones, or any other audio device that will accept audio input via a 3.5mm TRS cable.

## **1.7 HDMI Output**

The Mini HDMI port can be used to connect the tablet to any device that accepts video input via HDMI.

*Note: Mini HDMI to HDMI adapter is not included.*

## **1.8 MicroSD Card Slot**

This tablet supports MicroSD cards up to 32GB in size. A MicroSD card can be used to expand the tablets storage or to transfer large files to another device.

## **1.9 MicroUSB Connection**

Two MicroUSB connections are available; one labelled with a USB icon, the other with a power icon. USB connectivity can be achieved using the former MicroUSB connection, while charging over USB is only supported on the latter.

## **1.10 Hard Reset Button**

If while using the tablet you experience a severe software failure, you can use this recessed button to perform a hard reset of your tablet.

*Note: Do not use the Hard Reset Button for regular reset or shutdown of your tablet, as this may cause data loss or other unintended results.*

## 2. First Use

### 2.1 Battery Management and Charging

Before use, ensure the tablet is fully charged.

To charge the device, simply connect the device to the supplied AC power adapter or via USB using the MicroUSB charging slot.


For the first two charges, we recommend charging for at least 6 hours. Afterwards, only 4 hours should be necessary to fully charge the tablet.

*Note: Only use approved AC chargers with this tablet. To maximise the batteries total lifetime, we recommend only charging once the battery becomes mostly depleted.*

*If the device shutdown due to low battery, the device may not turn back on while charging until the battery reaches a certain threshold.*

*To improve charge time, do not use the tablet while charging.*

## 2.2 Connecting to a PC

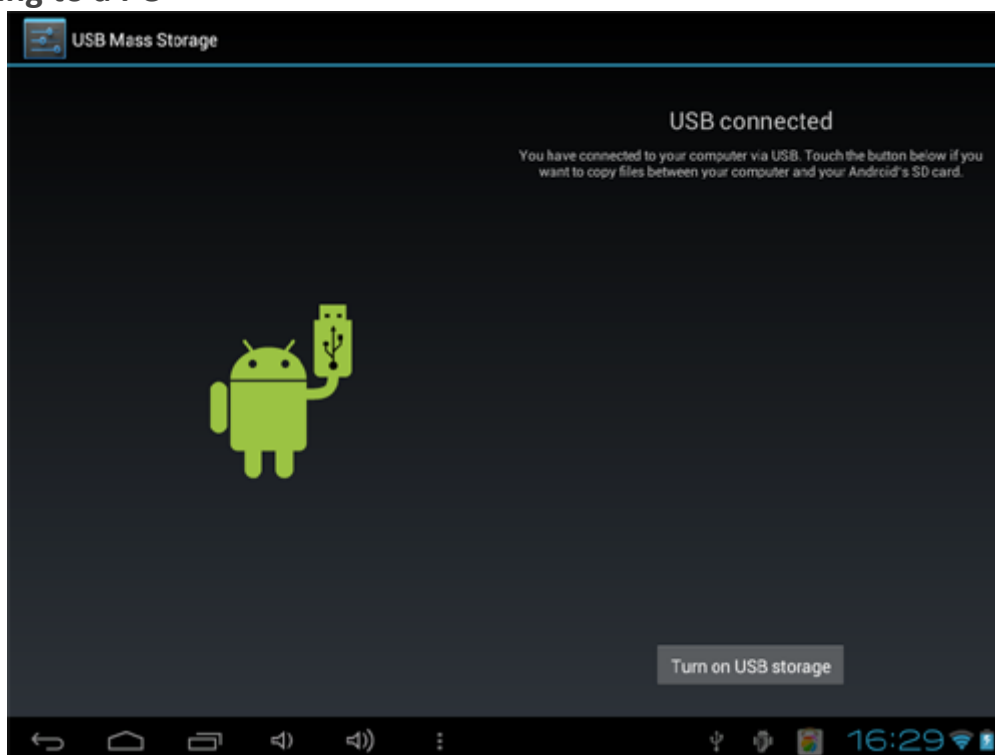

Using the data MicroUSB connection, connect your tablet to your computer.

A notification will ask you if you would like to enable USB Storage - select Yes, and the tablet will appear in your file explorer once any device drivers have finished installing.


Once connected, you can copy, paste and delete files and folders on the device like you would do on your computer.

If you have a MicroSD card connected to your tablet, this will show as an additional drive in your file explorer.

## 3.0 How to use Google Android 4.0

### 3.1 Main Interface

After completing the first-use setup wizard, the Android homescreen will be displayed.

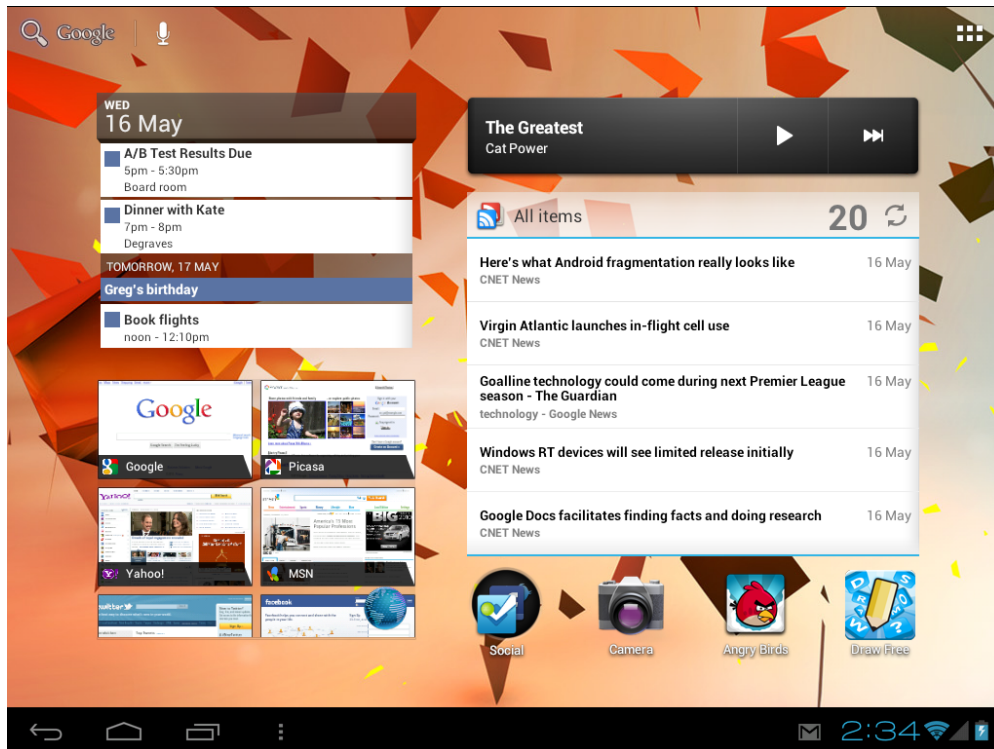

From the Android homescreen, you can:

- Create and use app shortcuts
- Add app widgets
- Drag, resize and rearrange app shortcuts and widgets
- Drag app shortcuts onto another to create folders

To add an app shortcut to your homescreen, long-press on an empty area. A popup will display a list of options to choose from. Once created, the icon can be moved to additional homescreens (to the left or right).

To delete an app shortcut, long-press on the shortcut you would like to remove, and drag it to the trash can that will appear at the bottom of the screen.



## 3.2 The Android Status Bar

 


Throughout your entire experience with the Agora tablet, the Android Status Bar will be present across the bottom of the screen. This bar is used to display notifications, provide settings shortcuts and is also home to the *Back*, *Home* and *Task Manager* soft-keys.

*Option buttons may also appear on the Status Bar depending on which app is open, usually represented by an icon of 3 vertical squares.*

## 4. The Settings Menu

You can quickly access your tablets settings menu by tapping the clock on the Status Bar, and then tapping the icon that has a series of sliders on it.

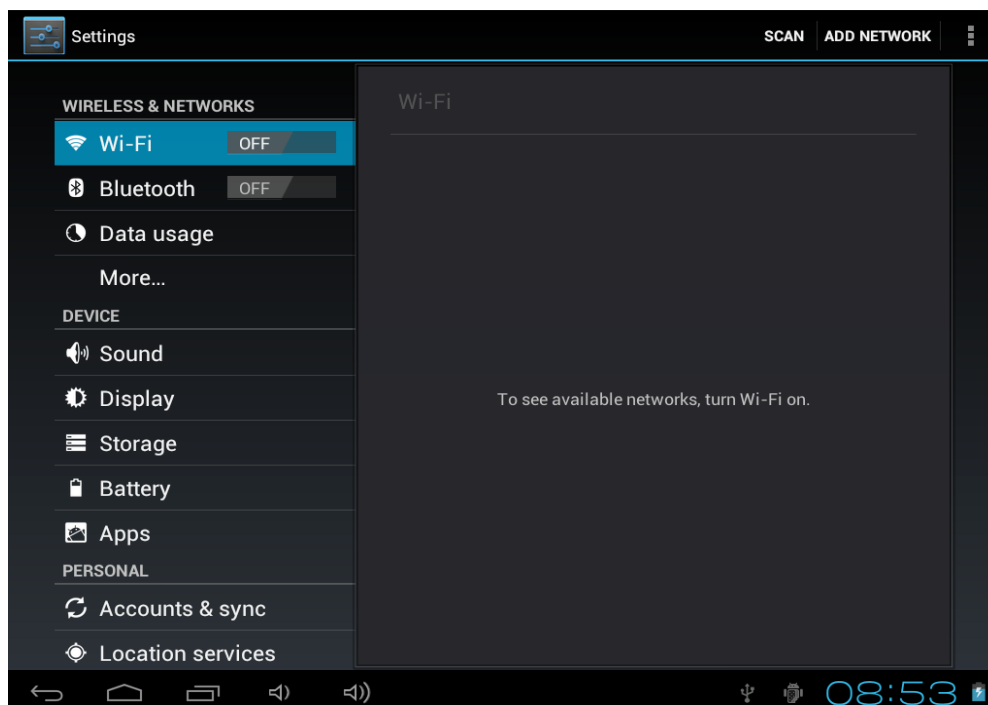

The Settings Menu contains very straight-forward menus relating to the operation of your tablet.

## 4.1 Wireless & Networks

This section contains various tools and options available for the wireless network capabilities of the tablet.


### Wi-Fi

To connect your tablet to Wi-Fi networks, simply tap the Wi-Fi option to enable the tablets Wi-Fi system.

Once enabled, the tablet will scan for available networks and list them to the right of the screen. Tab the desired network, enter the password if required, and your tablet will connect to the network.

### Bluetooth


To connect to Bluetooth devices, tapping the option will turn it on.

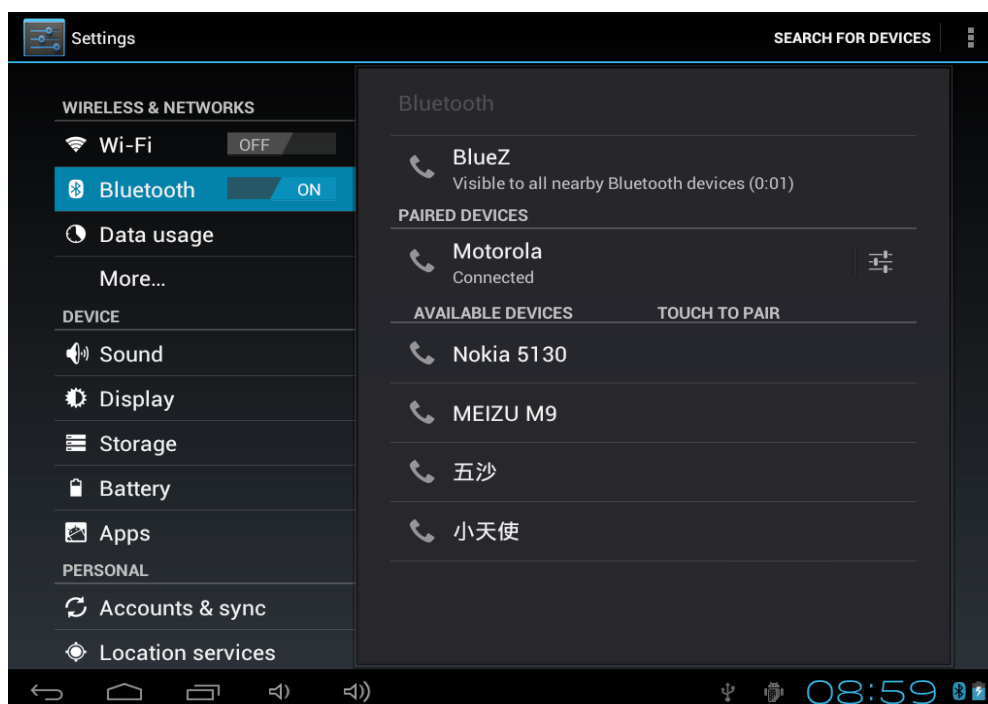

The tablet will scan for available devices. Select your desired device and enter a passphrase if necessary to connect.

## 4.2 Sound

The Sound menu gives you options to control media and system volume levels, touch sounds and screen lock sounds.

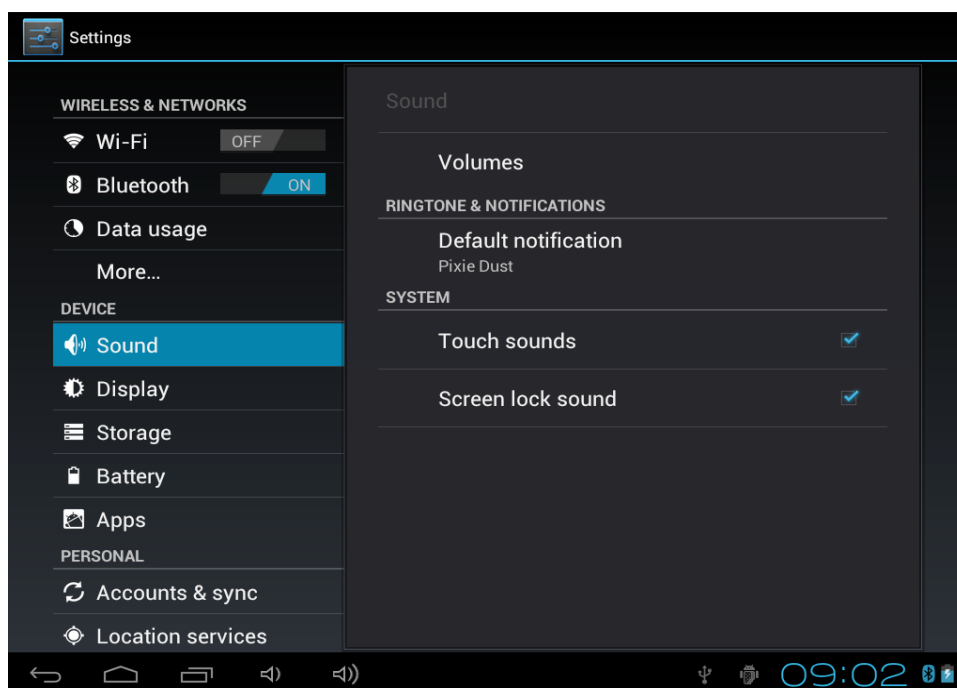

## 4.3 Display

The Display menu lets you change the screen brightness, wallpaper, screen sleep timeout, font-sizes, auto-rotate, accelerometer and G-sensor calibration.



## 4.4 Applications

## Managing Applications

The Apps menu lets you view all downloaded apps, where they are installed and what apps are currently running.




## Uninstalling Apps

To uninstall an app, simply find it in the list of installed apps and tap on it. You will be presented with a screen with a button to uninstall the app, along with other advanced settings.

## 4.5 Backup & Reset

The Backup & Reset menu contains options on how your data and accounts are stored and managed.

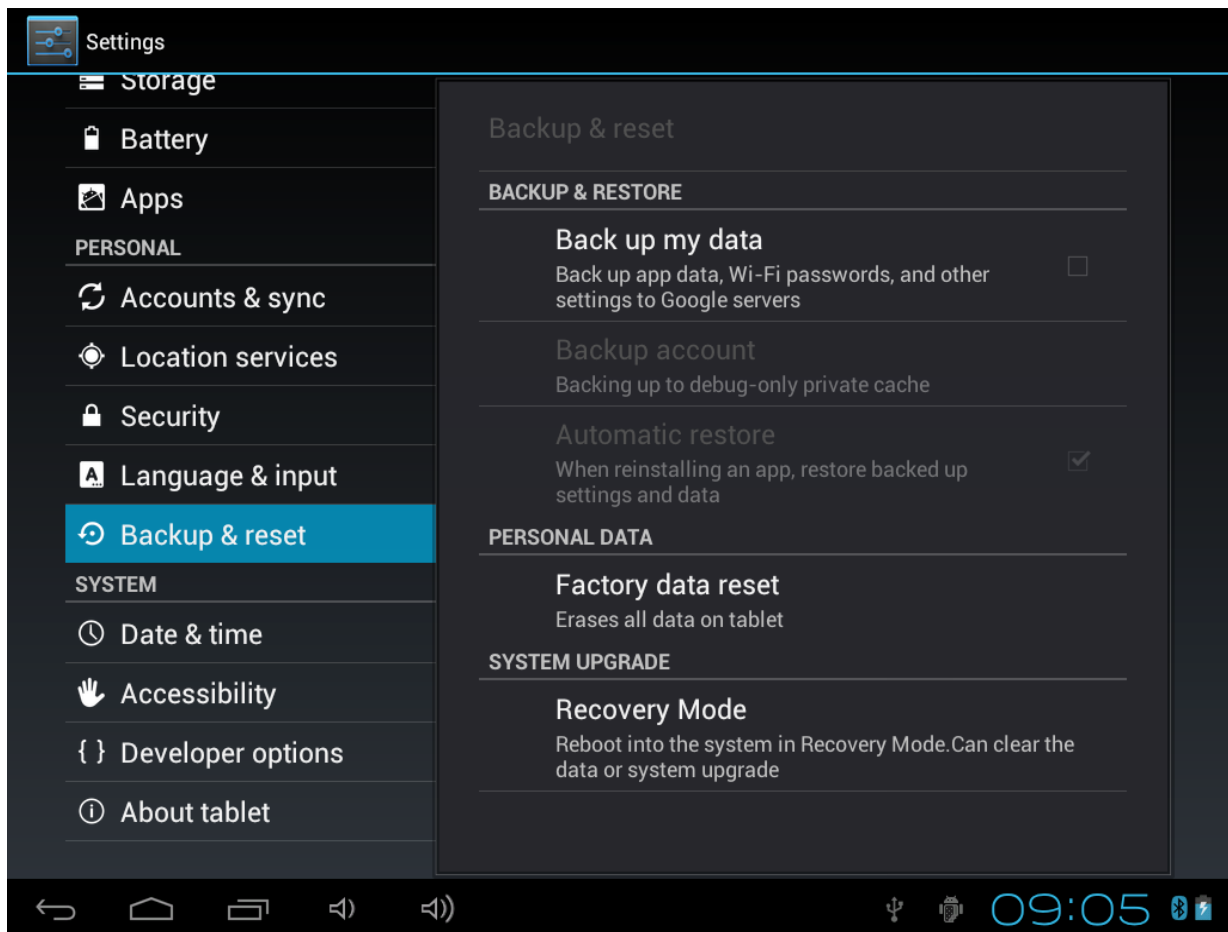

### Factory data reset

This option will erase any data, apps or settings you may have made to the device. All personal data, settings and files will be erased from the tablet if this option is selected.

### Backup my data

You can backup app data, Wi-Fi passwords and your settings to your Google account, stored on their servers.

## **4.6 Storage**

The Storage menu lets you view total available storage on the tablet and any removable storage devices.

You can remove or erase storage from here. You will not be able to get any data back that is erased from this menu unless you have backed it up previously.

## **4.7 Language & Input**

The Language & Input menu lets you modify the device language, auto-correct and auto-complete settings and on-screen keyboard options.

## **4.8 Date & Time**

The Date & Time menu lets you change the devices data and time, set automatic updates and date format.

## Applications

### Installing from Removable Storage

1. Open the File Manager
2. Choose your source location (MicroSD card, USB storage)
3. Navigate to your application's APK file and select it.
4. The application will install and can be found in your app draw.

*Note: To install an app from somewhere other than Google Play, you must first grant permission. Navigate to Settings > Security > Unknown Sources (checked). Only install apps in this manner from sources you trust.*

### Installing from the Web

1. Open the Browser, and navigate to the page where the app can be downloaded from.
2. Download the APK file to disk.
3. Navigate to your downloads folder using File Manager and select it.
4. The application will install and can be found in your app draw.

*Note: To install an app from somewhere other than Google Play, you must first grant permission. Navigate to Settings > Security > Unknown Sources (checked). Only install apps in this manner from sources you trust.*

### Installing from Google Play

1. Run the Google Play app (requires a Google account).
2. Search for and select the app you wish to download and install.
3. The app will automatically download and then install itself. It can then be found in your AppManager.

### Uninstalling Apps

You can uninstall any app that did not come pre-loaded on the device.

1. Navigate to Settings > Applications. Here you will see a list of all installed apps.
2. Find the app you wish to remove and select it.
3. Press the uninstall button. The app and any user data associated with it (login details, etc) will be removed from your device automatically.

## Support

In the event of a critical error, there are a few steps you can take before contacting Kogan Support.

1. Power the device off and leave it unplugged for 15-20 minutes. Reconnect the power and see if the problem has resolved.
2. Perform a factory reset of the unit. This will reset the device to an out-of-the-box state. Please make sure any important files you wish to keep have been transferred to removable storage beforehand.

If the above basic steps do not resolve the problem, please contact Kogan Support by sending us a message via the [Help Center](#).